


## Instruction for New Locking Adjustment Knob system

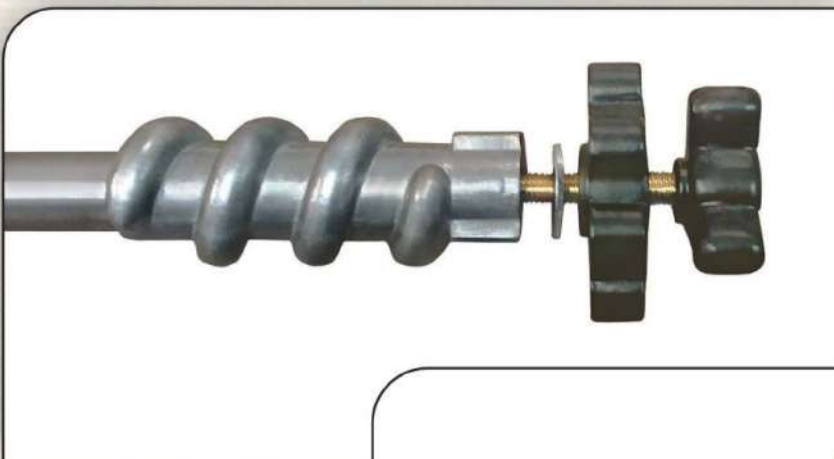

1. Place the front milling head onto the threaded auger post on the front of the mill. Twist it slightly back and forth until you feel it slip into place on the auger shaft.
2. Place the stainless-steel washer onto the threaded post and follow it with the large knob gently turning the large knob onto the threaded post until it starts to touch the milling head just softly.
3. Gently turn the small knob onto the threaded post until it slightly touches the large knob but not tight.
4. Add Grain or other product to your hopper and start turning the handle clock wise, adjust the large knob tighter or looser to get a finer or coarser flour output. When you reach the desired setting stop and while holding the large knob still with one hand, Tighten the small knob firmly against the large knob thus locking the setting you have selected in place. – To change settings simply loosen the small knob and adjust the large knob to a different coarseness or fineness and then again lock the small knob into place.
5. Always make sure to place the Stainless-steel washer between the adjustment knob and the milling head



Dimtsas  
since 1923

