



Wonder "Junior"

How to change Bush-Bearing.



- 1** Remove handle bolt and remove handle from auger shaft.



- 2** Remove pin from auger shaft and remove race washer.



- 3** Slide auger shaft from mill body.



- 4** Using a long flat punch, gently tap old bearings from mill body by tapping from the inside of the mill so old bearings will fall out from the handle side of the body.



- 5** Using a 1 inch wooden dowel gently tap the non flange edged bearing into the body gently until the edge is flush with the mill body.
- 6** Follow this with the bearing with the flanged edge again using one inch wooden dowel, gently tap the flange edged bearing into the auger shaft body gently until the edge is flush with the mill body.
- 7** Replace the auger shaft into the mill gently, turning the auger as you push it into the new bearings. The auger shaft will now be extending out the back of the mill again.
- 8** Install the new bearing race washer onto the auger shaft and then gently tap the spring pin so that it is evenly spaced on either side of the shaft.
- 9** Replace handle and handle bolt and tighten the bolt snugly.