


Handle Remover Instructions



1. Remove milling heads and handle bolt.

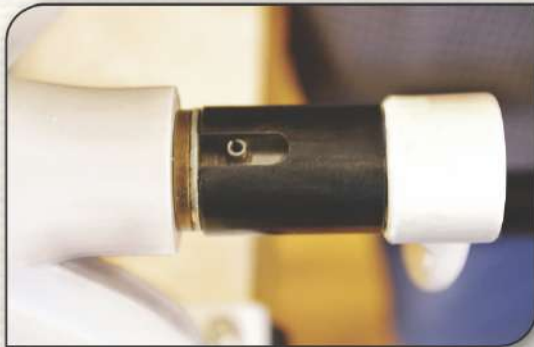

2. Place handle remover on shaft with handle pin through slot.



3. Install stainless steel milling heads. **DO NOT USE the STONE MILLING HEADS**, as they may crack.



4. Tighten adjustment knob until milling heads just touch.



5. Then slowly tighten adjustment knob more until handle pops off.