


HOW TO PROPERLY INSTALL THE PULLEY ATTACHMENT

Please follow directions carefully.
Improper installation can void warranty.



1. Remove milling heads and handle bolt.

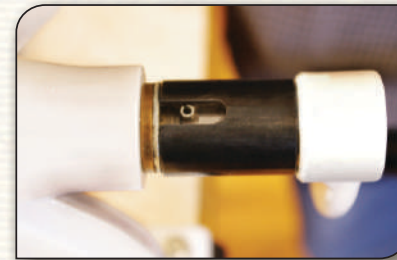

2. Place handle remover on shaft with handle pin through slot.



3. Install stainless steel milling heads (DO NOT USE the STONE MILLING HEADS - they might crack).



4. Tighten adjustment knob until milling head just touch.



5. Then slowly tighten adjustment knob more until handle pops off.



6. Loosen all 3 lock nuts on all 3 set bolts on Pulley Attachment.




7. Loosen all 3 set bolts until they no longer protrude into center hole.



8. Slide the Pulley Attachment onto the shaft with the set bolts facing away from the mill body.



9. Make sure the 3 set bolts are lined up with the 3 flat spots on the shaft and that the shaft end is flush with the Pulley Attachment (IT MUST NOT PROTRUDE BEYOND PULLEY SURFACE).

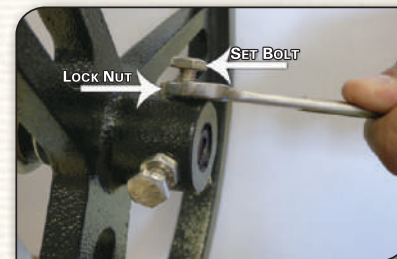

10. Tighten all 3 set bolts snug (do not over-tighten). Tighten all 3 lock nuts on all 3 set bolts.



11. Put the handle bolt and washer back onto the shaft and tighten bolt.
12. To remove the Pulley Attachment simply reverse this process and put handle back on mill.

■ If you have additional questions or if more help is needed Call : 208-234-9352